


ASSEMBLY INSTRUCTION

MODEL:MERI 1111P-SW LN6798


HARDWARE LIST

NO	A	B	C	D	E	F
DESC						
QTY	1	1	1	1	1	1

STEP 1

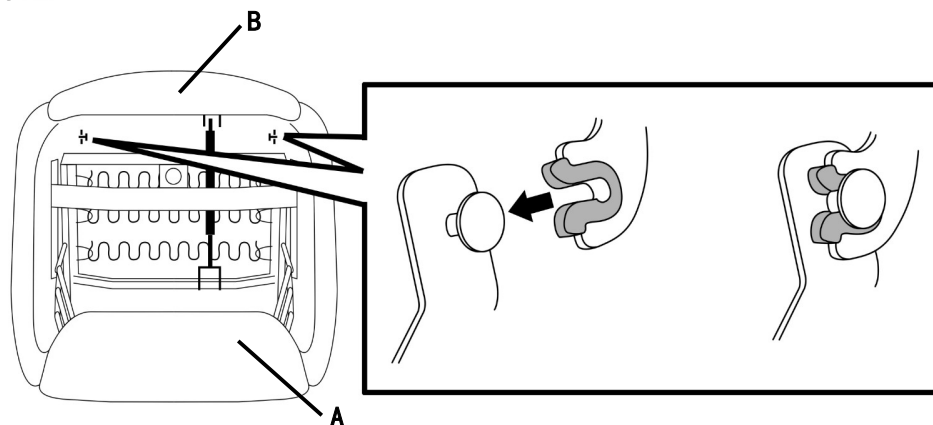

STEP 3

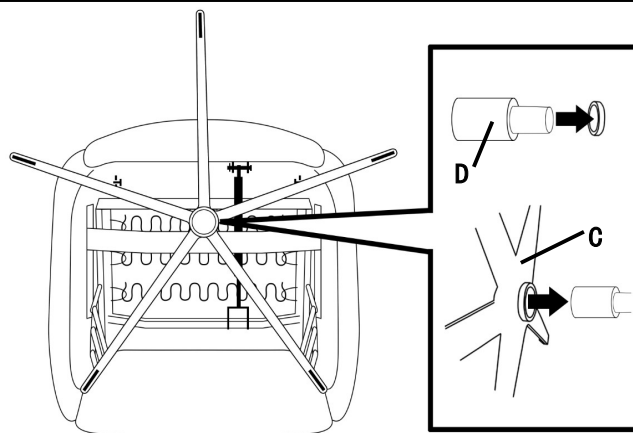

STEP 2

