


ASSEMBLY INSTRUCTION

SVEN-#21889


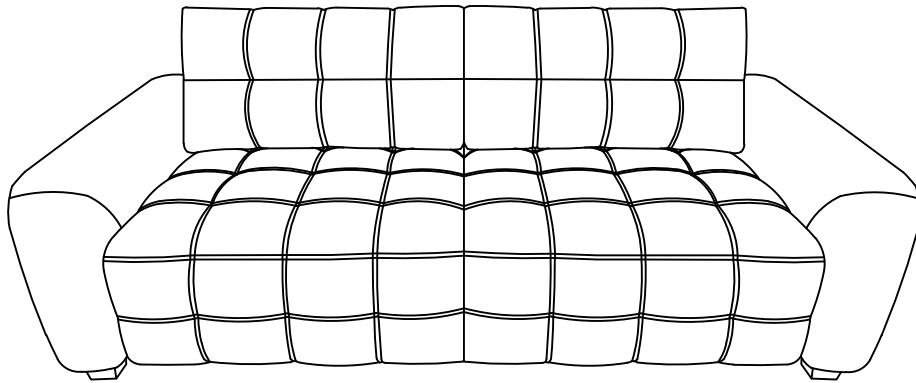


1# 1PC	2# 1PC	3# 1PC	4# 1PC	5# 2PCS	A# 4PCS	B# 6PCS
						



C# 6PCS	D# 4PCS	E# 1PC
 M5*45MM	 M8*60MM	 M5

Pattern of sofa reference only.


1

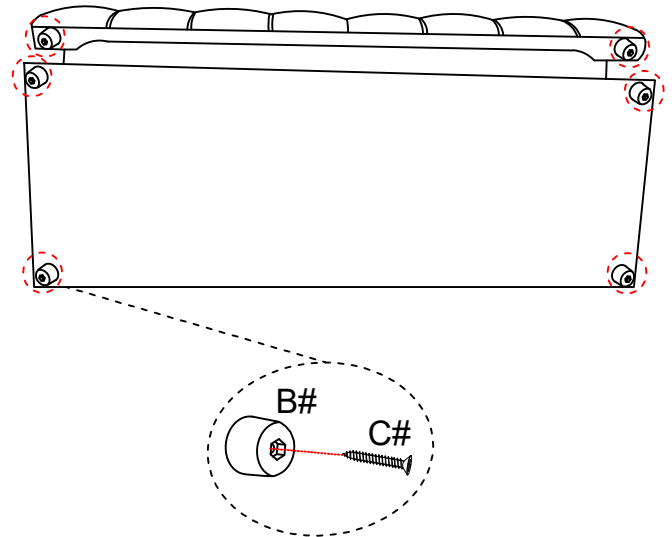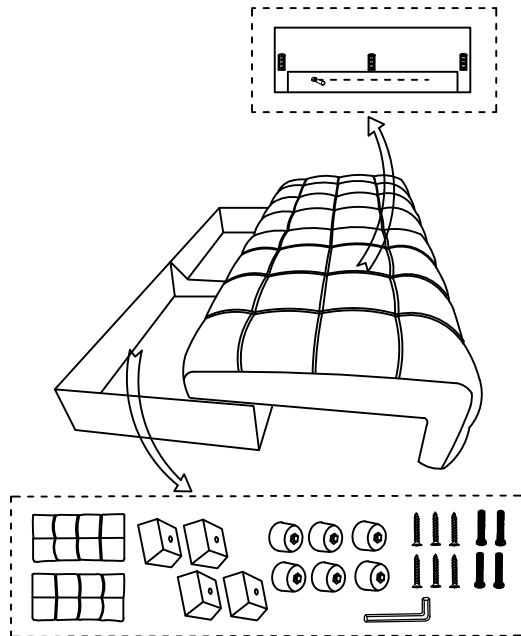


2

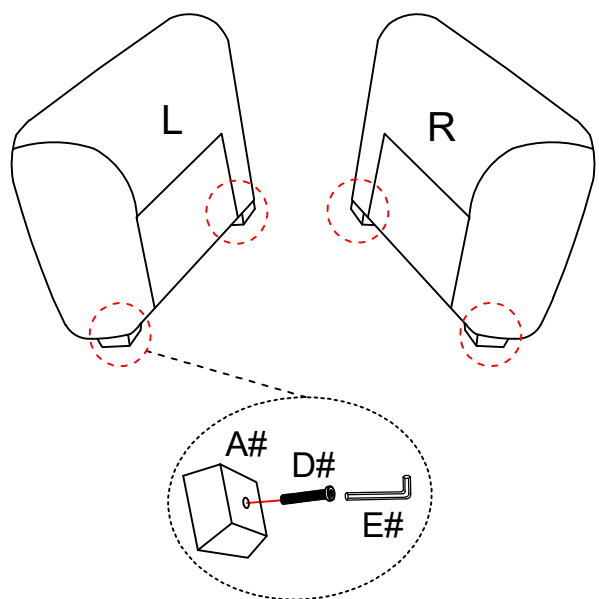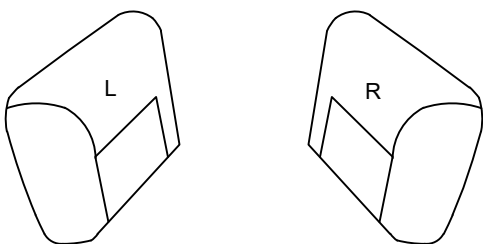


3

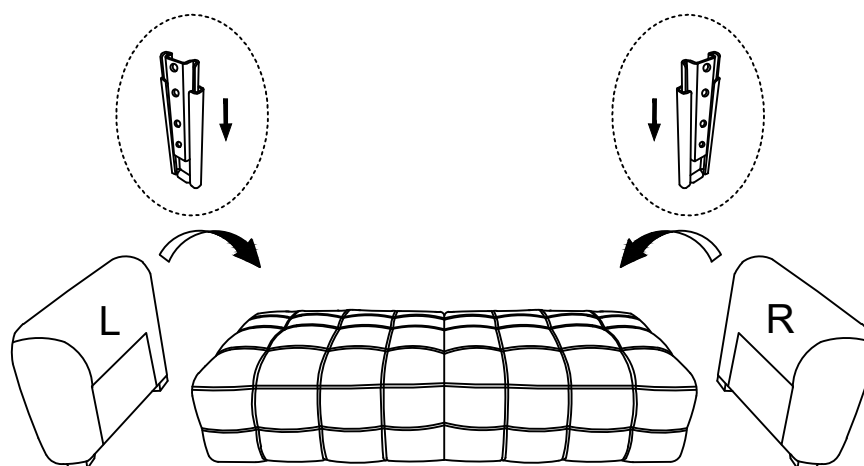


4

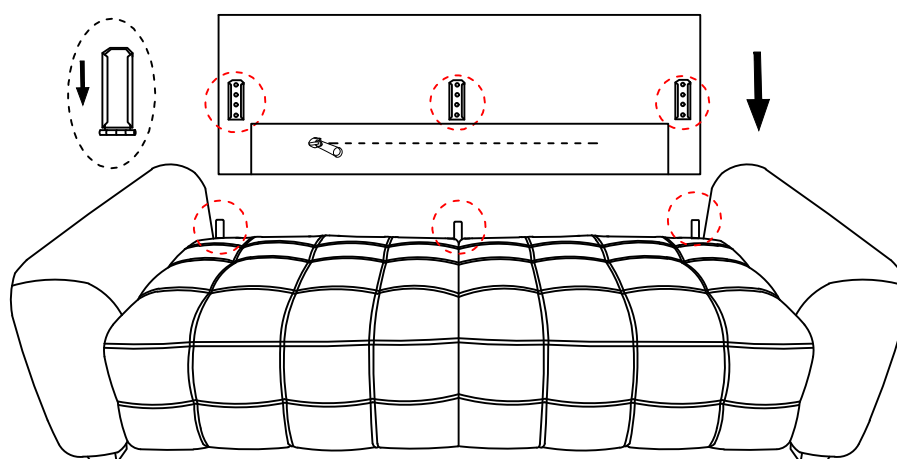


5

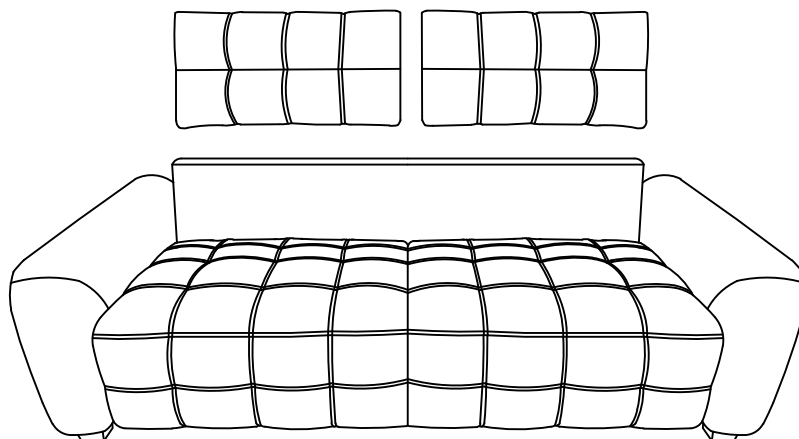

6

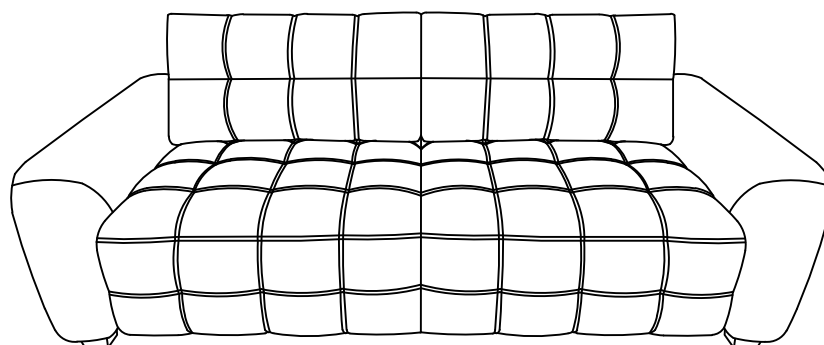

7

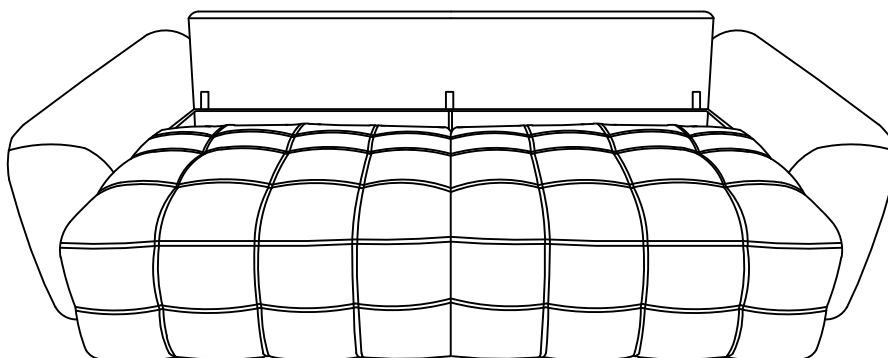

8

